

Water Tank Installation

West Country Concrete Products
Endford Works, Shebbear EX21 5RY
01409 281 437



01 Start with a firm Level Surface.
Alternatively tank pads can be used



02 Position your first panel on top of base pads and apply mastic to both recesses.




03 Position the second panel on top of base pads into one of the recesses and fix the holding bracket in place.




04 Position the third panel on top of base pads in the second recess ensuring it is square, apply mastic to the ends of both panels.



05 Position the fourth panel on top of base pads and in place. Ensure the structure is square. Insert the retaining bars and tighten.

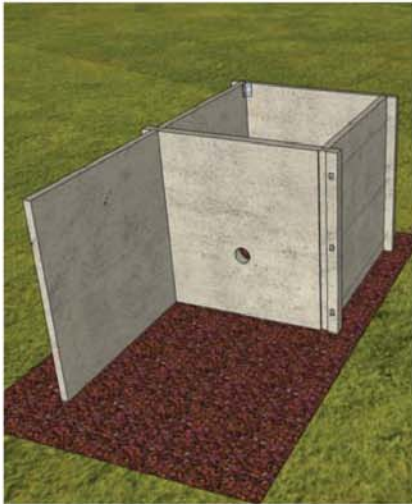


06 Apply mastic to the exposed recesses and position the fifth panel on top of base pads and ensuring it is square.

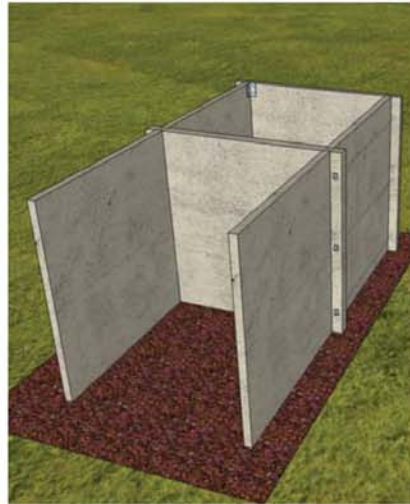


07 Position the sixth panel on top of base pads ensuring square and apply mastic to the ends of the fifth and sixth panel.



08 Position the final panel on top of base pads ensuring it is square. Insert the retaining bars and tighten.

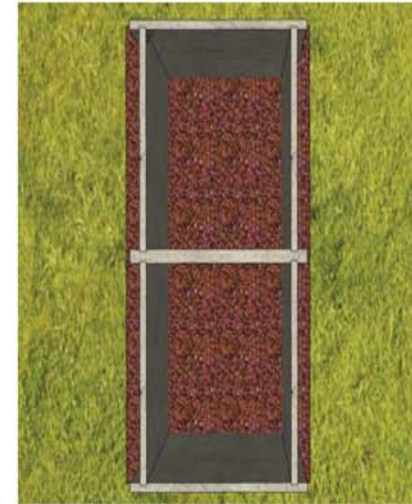

09 Check all securing bars are in place and check nuts for tightness.

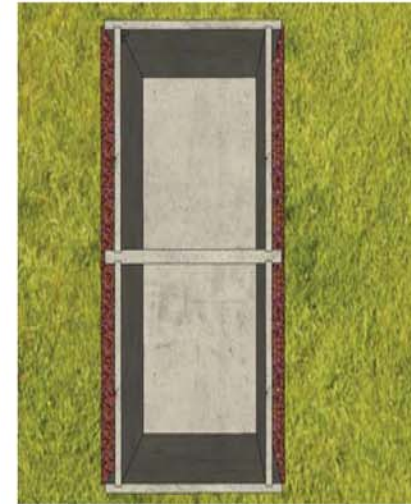

10 Pour the concrete floor and apply a sand and cement mortar to the internal joints.